

# LCL-11A

## Serial adapter for PIMA alarm systems



The LCL-11A is a serial adapter that enables to connect a PC/laptop installed with PIMA COMAX upload/download application, to PIMA alarm systems. It is also used to connect the alarm systems to Home Automation systems.


The LCL-11A has RS-232 serial connector on one end, and RJ-11 on the other; the serial connector is connected to a PC/laptop COM port or, via Serial-to-USB adapter, to a USB port; the RJ-11 is connected to an RJ-11 socket in any PIMA LCD keypad (RXN 400/410).

### Out of the box

- LCL-11A serial adapter (P/N 3411054)
- Serial-to-USB adapter (P/N 3411060)
- RJ-11 (4/6 pin connectors) cable (P/N 3411048 )

### Connecting the adapter

1. Connect the LCL-11A to an LCD keypad using the RJ-11 cable: the 6 pin connector connects to the LCL-11A box; the 4 pin connector connects to the keypad (the keypad's rear cover must be removed).
2. Connect the LCL-11A to a PC/laptop, either directly to a COM port using the RS-232 connector, or to a USB port using the Serial-to-USB adaptor.

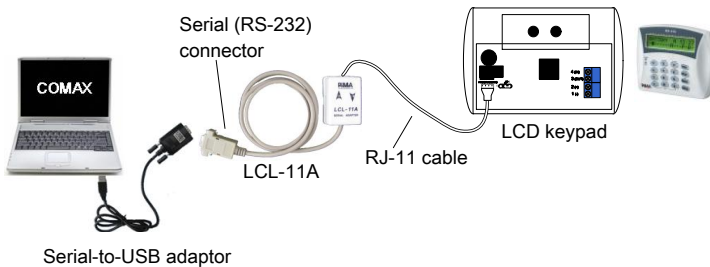

COMAX connection diagram

All efforts have been made to ensure that the content of this manual is accurate. Pima retains the right to modify this manual or any part thereof, from time to time, without serving any prior notice of such modification.

Please read this manual in its entirety before attempting to program or operate your system. Should you misunderstand any part of this manual, please contact the supplier or installer of this system.

Copyright © 2012 by PIMA Electronic Systems Ltd. All rights reserved.

PIMA Electronic Systems Ltd.

5 Hatzoref Street

Holon 58856

ISRAEL

Tel: +972.3.650.6414 Fax: +972.3.550.0442

Email: [support@pima-alarms.com](mailto:support@pima-alarms.com)

Web: <http://www.pima-alarms.com>

P/N 4410085



Ver: E1, XX en (June 2012)