

CAPTAIN 6

6 Zones Intruder Alarm System



USER GUIDE

System ver. 6.0

SAFETY INSTRUCTIONS

Your CAPTAIN-i alarm system has been registered in accordance with EN60950 and its rules. EN 60950 requires us to advise you the following information:

1. In this alarm system exists hazards of fire and electric shock. To reduce the risk of fire or electric shock, do not expose this alarm system to rain or moisture. Pay attention: Telephone cords could be a good conductor for lightings energy.
2. Do not open the door of the alarm system. Dangerous high voltages are present inside of the enclosure. Refer servicing to qualified personnel only.
3. This alarm system should be used with AC 230V50Hz, protected by anti electric shock breaker. To prevent electric shocks and fire hazards, do NOT use any other power source.
4. Do not spill liquid of any kind onto the unit. If liquid is accidentally spilled onto the unit, immediately consult a qualified service.
5. Install this product in a protected location where no one can trip over any line or power cord. Protect cords from damage or abrasion.
6. Disconnect all sources of power supply before proceeding with the installation. Pay attention: do not install low voltage wires near by AC power wires they should be separated.
7. Connect the AC transformer output to the terminal block on the control panel as marked.
8. Connect the AC line cord to line power terminals as marked. (GND; N; L)

Table of contents

Introduction	3
<i>Main Features</i>	3
<i>Access and Operation Codes</i>	4
<i>Keypad Description</i>	5
System Functions	6
<i>Green LED and System Status</i>	10
<i>Programming Functions</i>	10
Faults Indications	14
General Information	15
<i>Zone Names</i>	15
<i>Installer Information</i>	15

INTRODUCTION

Congratulations on your purchase of the CAPTAIN-i Alarm System. Much care has been taken in developing the CAPTAIN-i alarm system, which will provide you with unprecedented peace of mind. The CAPTAIN-i user-friendly operation and advanced features will professionally protect your home or business. It is important to familiarize yourself with the CAPTAIN-i Alarm System in order to take full advantage of the complete range of the CAPTAIN-i features. To assure optimum safety and security, you should test the CAPTAIN-i Alarm System once a week.

Main Features

- ◆ 6 programmable zones
- ◆ Two partitions
- ◆ Dialer: Up to three preset private telephone numbers and four Monitoring Station numbers
- ◆ Various modes of arming and disarming: keypad, key, remote control, automatic
- ◆ Four types of keypads: A simple LED keypad (RX-406 or RX-6), LCD keypads (RXN-400 or RXN-410) and Anti-vandal keypad RX/N-200
- ◆ Up to six different keypads, connected in parallel
- ◆ Two operating modes: Full or Home
- ◆ System Events is registered in memory (40 non-volatile)
- ◆ Various operating codes: Master Code, up to eight User Codes, and Short Code
- ◆ User Code #8 can function as DURESS code
- ◆ Optional temporary bypass of zones
- ◆ "Chime" mode per zone: operates the keypad buzzer when a zone is opened (e.g., to monitor a back door when system is disarmed)
- ◆ Monitoring Station Communicator: built-in dialer (private & CMS), integrated Long-Range Radio and Cellular Transmitters
- ◆ Inhibit system from arming in case of failure (optional)
- ◆ Short-keys for DURESS and FIRE codes

Access and Operation Codes

The following codes are used to access and operate the CAPTAIN-i Alarm System:

- ◆ **Master Code:** Use this code when programming system parameters. The default factory Master Code is 5555. For security reasons, it is not recommended to use the default code to arm or disarm the system.



IMPORTANT!

For better protection, the default factory **Master Code** must be changed.

- ◆ **User Code:** 4-6 digit code. Up to eight User Codes can be programmed, User Code 1 to User Code 8.
- ◆ **Short Code:** A convenient, two-digit code used only to arm the system.
- ◆ **Duress Code:** 4-6 digit code used for disarming the system in case it is armed, and sending duress event to MS, or sends silent duress event to MS in case system is disarmed.

PIMA's LCD keypads RXN-400 and RXN-410 were especially designed for maximum simplicity, durability and decorative design. The keypad is used for arming, disarming and programming the system as well as displaying time and date, system status information, events and defaults, memory log and more. Up to six keypads can be connected to the system CAPTAIN-i. Both keypad models are identical, except for the size of the display screen:



RXN-400

Normal screen 15 x 60 mm




RXN-410

Large screen 23 x 97 mm



Both keypads must be powered by nominal 12VDC (9VDC-13.8VDC tolerance) from Limited Power Source power supply. Compliant with Clause 2.5 of EN 60950-1:2006 Standard.

Keypad Description

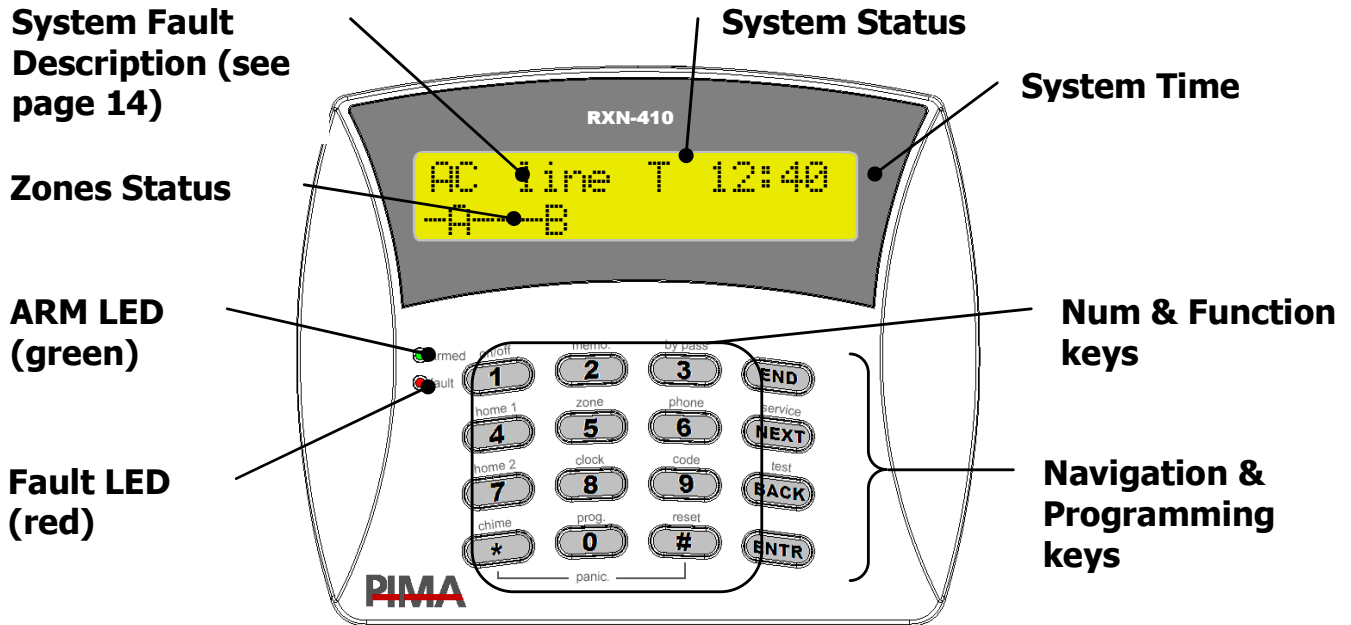

Display Screen


- ◆ The upper line displays the System Fault, System Status and Time
System Status:
 - P System communicating or testing PSTN line
 - T System reporting to Monitoring Station via radio transmitter
- ◆ The lower line displays information about the zones' status. Each of the following characters signifies a certain status. The characters appear above the zone number on the display.
 - Closed zone
 - Opened zone
 - B Bypassed zone
 - A Alarm zone (zone triggering alarm)
 - C Chime zone
 - F Failed zone (disconnected or shorten)




SYSTEM FUNCTIONS




IMPORTANT!

The  symbol indicates information that you must enter.

- **To arm the entire alarm system:**  Any *User Code* (User Code #1 to #8) that was allocated by the installer to both partitions

OR  *Master Code*   ^{ON/OFF}

OR *Short code*.





- To disarm the entire alarm system:**  Any *User Code* (User Code #1 to #8) that was allocated by the installer to both partitions

OR *Master Code*   ^{ON/OFF}



IMPORTANT!

- Entering the Master Code when one of the partitions is armed will arm the other partition as well.
- Entering the Master Code when both partitions are armed will disarm the entire system.

- **To arm the alarm system to HOME mode:** Press and hold  ^{HOME 1}
(or  ^{HOME 2})  Any *User Code* / OR  *Short code*.

- To disarm the alarm system:**  Any *User Code* (User Code #1 to #8)

- **To arm/disarm Partition #1:**  Any *User Code* that was allocated by the installer to partition #1 (toggle mode)

- **To arm/disarm Partition #2:**  Any *User Code* that was allocated by the installer to partition #2 (toggle mode)



NOTE:

- User can arm/disarm only partitions allocated to him by the installer (partitions #1, #2, or both).
- All keypads connected to the system share the same display, even if they are allocated to different partitions.



IMPORTANT!

If the installer enabled the "Failure Inhibits Arming" feature, the user will not be able to arm the system in case of failure (i.e. AC, Battery, etc.) For further information on this feature turn to *CAPTAIN-I Ver.5 Installation Manual*.

➤ **To bypass/reactivate alarm zone:** Master Code

 


OR

Hold and press until you receive the following screen:

Enter *User Code* and receive the following screen

Enter zone number to be bypassed and receive the following conformation screen (example):



- ◆ Repeat process in order to bypass different zone(s).
- ◆ To cancel the bypass and reactivate the zone: repeat the bypass activation process with this zone's number (toggle operation).



IMPORTANT!

 
Every bypassed zone is logged in the system's memory, including the time and date.




NOTE:

When Bypass mode is executed, it is effective until you disarm the system.

➤ **To manually reset the smoke or fire detector:** Press and hold




- **To identify the zone that is the cause of the alarm:** The letter **A** is displayed above any Alarm Zone that was triggered while the system was last armed.



 





- **To enable the Chime mode:** Press and hold . The message **CHIME ON** is displayed for about 3 sec on the LCD display.




NOTES:


- This mode activates a buzzer in the keypad when a Chime Zone is triggered. This feature can be used to monitor unauthorized entry or exit in the defined zone when the system is not armed.
- To learn how to program a Chime Zone see “To program/cancel a Chime Zone” on page 13.

- **To disable the Chime mode:** Press and hold . The message **CHIME OFF** is displayed for about 3 sec on the LCD display.

- **To view system events in memory:**  *Master Code* 
, and then scroll using the  or  keys 
  to exit.

 OR, to view events scrolled automatically:  Press and hold





- **To temporarily cancel the Entry Delay Time:** Press and hold  and receive the following message: “DELAY OFF”. Press and hold again: “DELAY ON”.



NOTE:

 When this feature is enabled, it is effective only until the system is disarmed.

- **Reporting PANIC Event to CMS/Private Dialer:** Press and hold  and  simultaneously for two seconds.



**NOTE:**

You can customize your system's response to keypad's panic event, e.g., report to the Monitoring Station or call your private telephone number or sound the siren.

Consult your installer about programming keypad's Panic Response.



In addition, if the installer programmed **User Code 8 as "Panic Code"**, entering user code 8 will:

- ◆ Report a panic event to CMS (logged in memory as "Panic" with time and date)
- ◆ Disarm the panel or a single partition, or both partitions

- **Reporting DURESS Event to CMS/Private Dialer:** Press and hold  and  simultaneously until a conformation beep from keypad.



**NOTE:**

The event is logged in memory as "Duress" and includes time and date.

- **Reporting FIRE Event to CMS:** Press and hold  and  simultaneously until a conformation beep from keypad.



**NOTE:**

The event is logged in memory as "Fire" and includes time and date.

- **To disable a keypad's audible tones:** Press and hold  and  simultaneously.

**NOTE:**

When the keypad's Audible Tone feature is disabled, **all** audible tones and indications, with that keypad, are silenced.

- **To enable a keypad's audible tones:** Press and hold  and  simultaneously until you hear a beep.

Green LED and System Status

The **Green-ARMED LED** will indicate the **system status**, as follows:

- ◆ **Blinking:** The system is in Entry (before disarming) or Exit (after arming) Delay Time mode.
- ◆ **Steady Light:** The system is armed.
- ◆ **In case of partitions**, see the table below:

Armed Partition/s	LCD Screen Display	Green LED
Partition #1 armed	Part1 ON	1 blink every 4 seconds
Partition #2 armed	Part2 ON	2 blinks every 4 seconds
Both partitions armed (entire system)	**** ON ****	Stays lit constantly













Programming Functions



IMPORTANT!

Before beginning to program the CAPTAIN-i Alarm System, you must first enter the Master Code (the default factory code is 5555). When **Select.** appears on the LCD display, you may proceed with programming your system.

- **To cancel a command:**   **X3**  Start the programming procedure from the beginning.

- **To program a Master Code:**  Initial Master Code  
   new Master Code (4-6 digits)  
   .

➤ **To program User Code #1:** Master Code new User Code (4-6 digits) .

➤ **To delete User Code #1:** Master Code .







➤ **To program User Codes #2 to #8:** Master Code (as many times as the User Code number) new User Code (4-6 digits) .

➤ **To delete User Code #2 to #8:** Master Code (as many as the User Code number) .

 







Example:
 When programming or deleting User Code #6, enter the Master Code, press the key, followed by pressing the key six times.

➤ **To program a Short Code:** Master Code new Short Code (2 digits) .



➤ **To delete a Short Code:** Master Code  
   










➤ **To program Automatic Arming:** Master Code 
 (HH:MM
 24 hour format)  

➤ **To program telephone number(s):** Master Code 
 Enter the first telephone number including area code 
 Enter the second telephone number including area code
 Enter the third telephone number including area
 code  












 








NOTES:

- You can program up to three telephone numbers into the system memory, which will be called in an emergency or when in Alarm Event.
- To skip a number (i.e., leave the programmed number or leave it empty), simply press . Press  to exit the mode.
- If the CAPTAIN Alarm System is connected behind a PBX, you must enter the outside line prefix digit and an asterisk before the telephone number. For example: 9*555-5555.
- When the CAPTAIN Alarm System calls to one of the programmed telephone numbers, a siren tone is heard on the subscriber telephone.
- For playing a pre-recorded message, a VU-20 unit (optional) is required. Consult your installer for this option.
- It is also possible to connect the microphone unit MIC-200

- **To delete telephone number(s):**  Master Code   .
 With the telephone number(s) to keep   and with the
 one(s) to delete     to exit.

**NOTE:**

To delete all the telephone numbers,  Master Code    .
 **x3**   .


- **To set the time and date for the system:**  Master Code 
  current time (HH:MM 24 hours format)  
 current date (YY MM DD format)     .

**NOTES:**

- It is important to set the correct time and date to ensure proper functioning of your CAPTAIN Alarm System.
- If **NO** time is entered, the red Fault LED will blink and a **CLOCK** message is displayed.

- **To program/cancel a Chime Zone:**  Master Code 
  zone number   .

**NOTE:**

This mode activates a buzzer in the keypad when a Chime Zone is triggered. Chime Zones are indicated by the letter  in the display above the programmed zone number (in "Select" mode).

FAULTS INDICATIONS

Display	Description
Battery	Low battery power ¹
Phone	No dial tone detected ^{2,3}
AC line	AC power failure ²
Clock	Appears after initial power input or after total power reset (AC and battery) ⁴
Low DC	Very low DC supply to the alarm card (PCB) ²
Trouble	Detector was shorten or cutoff ²
DC FUSE	Detectors power line (+/-) was shorten ²
Communic	Failure to communicate with Central Monitoring Station (CMS) ^{2,5}
GSM Unit	GSM unit is not identified by system ^{2,5}
GSM Sgnl	Low GSM signal ^{2,6}
GSM SIM	SIM card failure ²
GSM Com.	GSM communication to CMS failure ^{2,5}
KEYBOARD NOT CONNECTED	A problem with keypad connection to the panel ²

¹ Wait 24 hours, if fault persists, contact the installer.

² Contact the installer.

³ Check the phone line at the premises.

⁴ Set the system time and date.

⁵ Contact the Central Monitoring Station.

⁶ Check with cellular carrier.

GENERAL INFORMATION

Zone Names

No.	Name	Note
1		
2		
3		
4		
5		
6		

Installer Information

Company	
Name	
Tel.	
Cell phone	
Email	

PIMA Electronic Systems Ltd. does not represent that its product may not be compromised and/or circumvented, or that the Product will prevent any death, personal and/or bodily injury and/or damage to property resulting from burglary, robbery, fire or otherwise, or that the Product will in all cases provide adequate warning or protection. The User understands that a properly installed and maintained equipment may only reduce the risk of events such as burglary, robbery, and fire without warning, but it is not insurance or a guarantee that such will not occur or that there will be no death, personal damage and/or damage to property as a result.

PIMA Electronic Systems Ltd. shall have no liability for any death, personal and/or bodily injury and/or damage to property or other loss whether direct, indirect, incidental, consequential or otherwise, based on a claim that the Product failed to function.

Please refer to a separate warranty statement found on PIMA website at:

<http://www.pima-alarms.com/site/Content/t1.asp?pid=472&sid=57>

Warning: The user should follow the installation and operation instructions and among other things test the Product and the whole system at least once a week. For various reasons, including, but not limited to, changes in environment conditions, electric or electronic disruptions and tampering, the Product may not perform as expected. The user is advised to take all necessary precautions for his/her safety and the protection of his/her property.

This document may not be duplicated, circulated, altered, modified, translated, reduced to any form or otherwise changed; unless PIMA's prior written consent is granted.

All efforts have been made to ensure that the content of this manual is accurate. Pima retains the right to modify this manual or any part thereof, from time to time, without serving any prior notice of such modification.

Please read this manual in its entirety before attempting to program or operate your system. Should you misunderstand any part of this manual, please contact the supplier or installer of this system.

Copyright © 2010 PIMA Electronic Systems Ltd. All rights reserved.

PIMA Electronic Systems Ltd.
5 Hatzoref Street, Holon 58856, Israel
Tel: +972.3.6506414
Fax: +972.3.5500442
Email: support@pima-alarms.com
Web: <http://www.pima-alarms.com>